




Building Supplies R Us Limited,
Unit 5, Brindley Court,
Gresley Road, Shire Business Park,
Worcester, WR4 9FD
T : 0871 770 4060
F : 01905 757 879
www.buildingsuppliesrus.co.uk

SWIFT 
PLINTH



Swift Plinth for:

-  Log & Modular Buildings
-  Cricket Pavilions
-  Play Houses
-  Holiday Lodges
-  Summer Houses
-  Any Raised Floor Applications

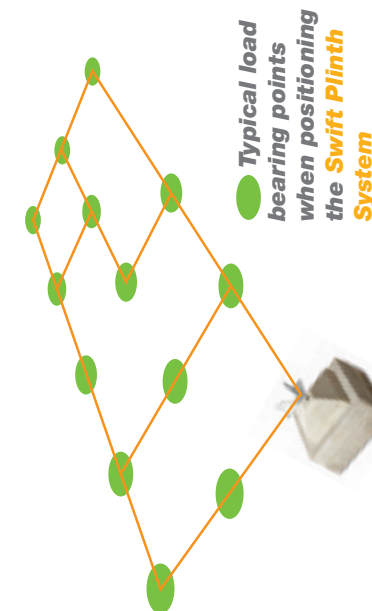

Stage 1



Remove surface root layer.
Dig a hole approx 600x600x250.
Line with permeable membrane.
Place 150mm hardcore on membrane.
Position Swift Base Stone and level hardcore.

Stage 2



Overlay membrane on the whole foundation site.
Place the Swift Top Stone onto the Swift Base Stone.
Cover the membrane area with surface dressing.

Stage 3



Take the Swift Bracket and locate on load bearing beam, secure by coach screw fixing.

Stage 4



Lift the beams onto the Swift Top Stone and allow the adjustable leg of the bracket to locate in the centre hole.